


REV	CD NO	CHANGE	BY	DATE	APVD
-	-	-	-	-	-
-	-	-	-	-	-
-	-	-	-	-	-

PROPERTY OF OIL-RITE CORPORATION  
 This print is loaned only and subject to return upon demand, and upon the express condition that it is not to be reproduced or copied, or information from it furnished to others, or to be used in any way detrimental to the interests of Oil-Rite Corporation.

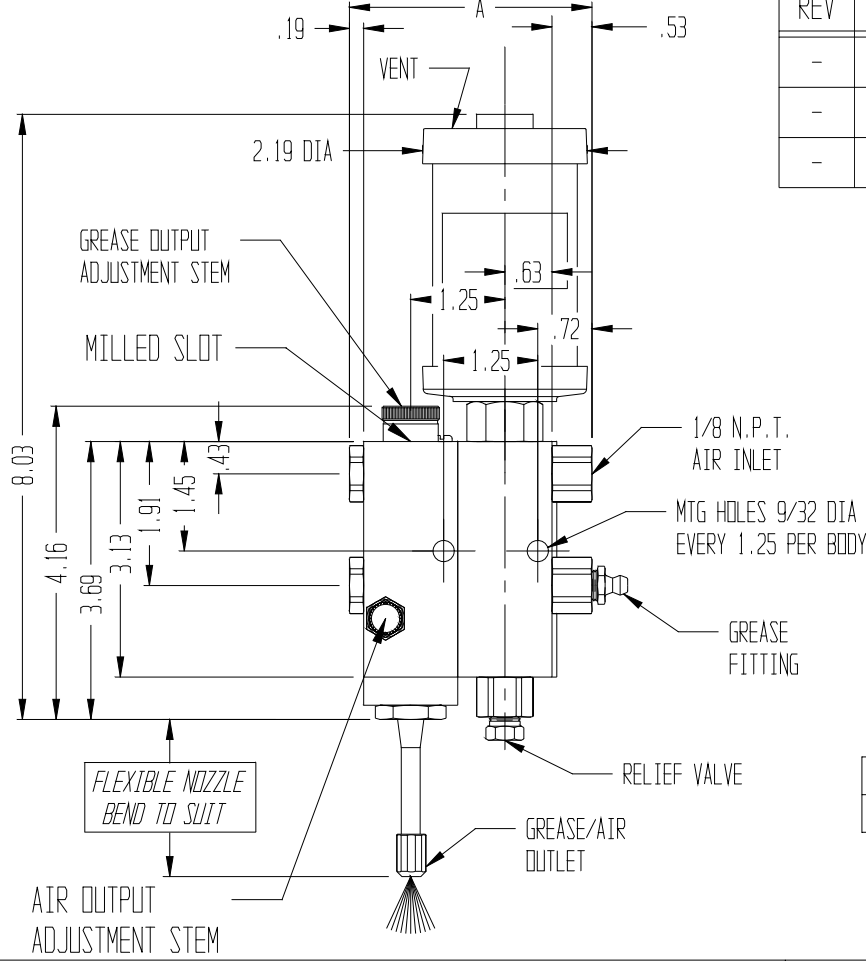

NOTE: START UP PROCEDURE MUST BE DONE IN A CLEAN ENVIRONMENT.

SPECIFICATIONS:  
 AIR PRESSURE REQUIRED: 40-120 PSI  
 SEALS: BUNA OR VITON STANDARD  
 OTHER MATERIALS: ALUMINUM, BRASS, STAINLESS STEEL, & PLATED STEEL

ASS'Y NO. B-3586

NO. OF FEEDS	1	2	3	4	5	6
A	3 7/32	4 15/32	5 23/32	6 31/32	8 7/32	9 15/32

BODY IS 1 1/8 THICK

I) INSTALLATION

- A. Mounting:  
 One 9/32" DIA. through mounting hole per body. Secure to flat surface. Pump may be mounted in any position (such as up side down).
- B. Air and Grease Connections:  
 1. Fill grease reservoir using fitting on side of pump.  
 2. Air nozzle at the point to be lubricated.  
 3. Attach air line from air control equipment, to 1/8 N.P.T. air inlet.

II) OPERATION:

- A. Start-Up Procedure:  
 1. Fill reservoir with grease.  
 2. Set the air cycle rate and air pressure.  
 3. Set grease output using grease output adjustment stem.  
 4. Set air spray using air output adjustment stem.  
 5. Pump is ready to operate.  
 6. For faster start-up, prefill lines.

B. Grease Output Adjustment:

- Use the adjustment stem atop each feed in conjunction with the air cycle rate. Individual conditions may vary.
- Turn the liquid output adjust stem clockwise until it bottoms out.
- Turn the liquid output adjust stem counterclockwise until the zero lines up with the milled slot in the top of the body. At this point the liquid output per cycle is zero.
- From this zero point, each counterclockwise turn of the adjustment stem increases output per cycle by:  
 .00026 in<sup>3</sup>/.0042 cc/.00014 oz.
- Max output, per cycle, per feed, with grease output adjustment stem backed completely out:  
 .0012 in<sup>3</sup>/.02 cc/.00068 oz.

C. Air Spray Control:

Use the air output adjustment stem to vary or shut off the air spray.



TOLERANCES UNLESS OTHERWISE SPECIFIED:  
 FRACTIONAL ± 1/64  
 DECIMAL .XX ± .020  
 DECIMAL .XXX ± .005  
 DECIMAL .XXXX ± .002  
 ANGLES ± 1 DEG  
 ASSEMBLIES: ALL DIMENSIONS ARE REF.

SCALE: 3:8  
 DATE: 3-1-04  
 DRAWN: RSH  
 APV'D: MW

TITLE:  
 INSTALLATION & OPERATION INSTRUCTIONS  
 1/8" AIR OPERATED SPRAY PurgeX  
 WITH INTEGRAL GREASE RESERVOIR  
 ASS'Y B-3586 STYLE: DGS

DRAWING NUMBER:  
 A-7259  
 REV: -